


9. PARTS LIST

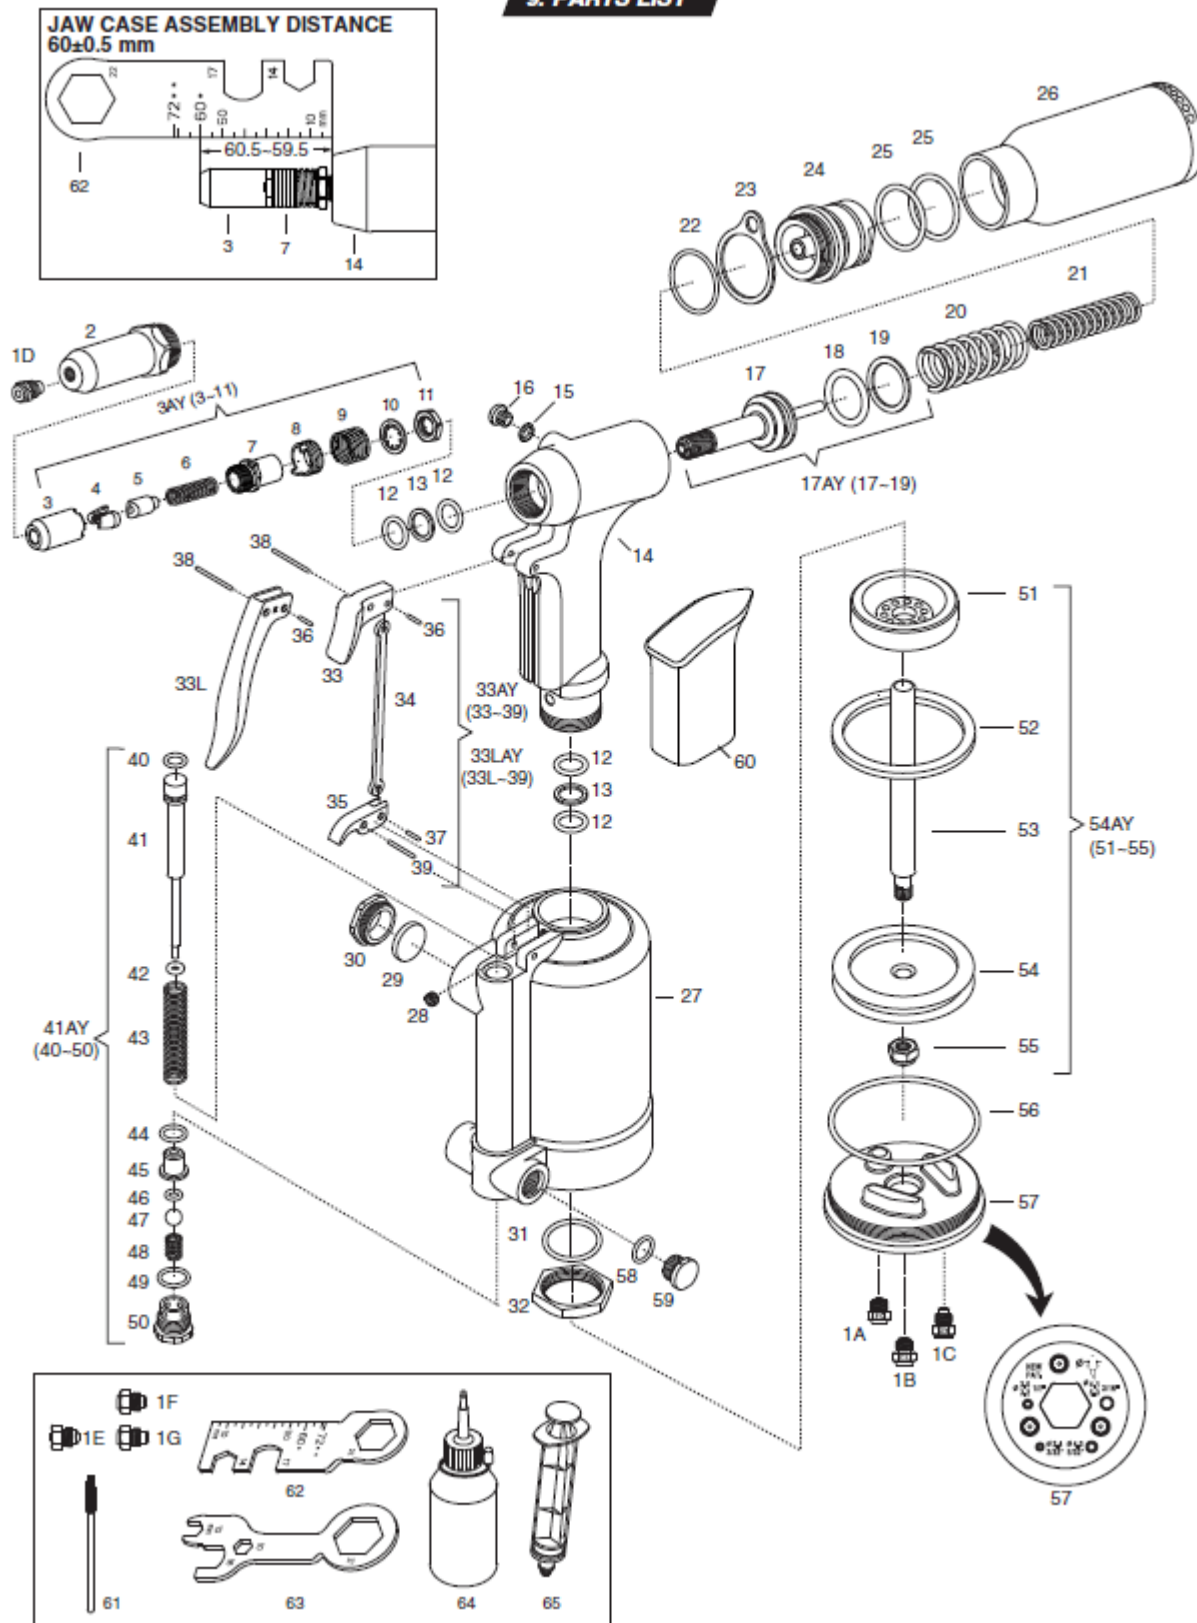

NO.	PART NO.	PART NAME	NO.	PART NO.	PART NAME
• 1A	AR102-01A	Standard Nosepiece, 2.4 mm or 3/32"	• 32	AR102-32	Oil Cylinder Lock Nut
• 1B	AR102-01B	Standard Nosepiece, 3.0/3.2 mm or 1/8"	33	AR102-33	Trigger
• 1C	AR102-01C	Standard Nosepiece, 4.0 mm or 5/32"	▲ 33L	AR102-33L	Trigger, Long Type (Option)
• 1D	AR102-01D	Standard Nosepiece, 4.8/5.0 mm or 3/16"	34	AR102-34	Trigger Link
• 1E	AR102-01E	Optional ★Monobolt Nosepiece, 4.8/5.0 mm or 3/16"	35	AR102-35	Trigger Lever
• 1F	AR102-01F	Optional 4.0 HSS Nosepiece for High Strength Structural (HSS) Blind Rivet, 4.0 mm or 5/32"	• 36	AR102-36	Upper Link Pin
			• 37	AR102-37	Lower Link Pin
• 1G	AR102-01G	Optional 4.8 HSS Nosepiece for High Strength Structural (HSS) Blind Rivet, 4.8/5.0 mm or 3/16"	• 38	AR102-38	Trigger Pin
			• 39	AR102-39	Lever Pin
2	AR102-02	Head	33AY	AR102-33AY	Trigger Assembly (33~39)
3	AR102-03	Front Jaw Case, Quick-Change Type	▲ 33LAY	AR102-33LAY	Trigger Assembly (33L~39), Long Type (Option)
• 4	AR102-04	Jaws, 2-PC Type	• 40	AR102-40	Valve Pusher Upper O-Ring
• 5	AR102-05	Jaw Pusher	41	AR102-41	Valve Pusher
• 6	AR102-06	Jaw Pusher Spring	• 42	AR102-42	Valve Pusher Lower O-Ring
7	AR102-07	Rear Jaw Case, Quick-Change Type	43	AR102-43	Valve Pusher Spring
8	AR102-08	Lock Ring, Quick-Change Type	• 44	AR102-44	Valve Sleeve O-Ring
9	AR102-09	Lock Ring Spring, Quick-Change Type	45	AR102-45	Valve Sleeve
10	AR102-10	Lock Washer	• 46	AR102-46	Valve Ball O-Ring
11	AR102-11	Lock Nut	47	AR102-47	Valve Ball
3AY	AR102-3AY	Jaw Case Assembly (3~11), Quick-Change Type	48	AR102-48	Valve Spring
• 12	AR102-12	Oil Cylinder O-Ring	• 49	AR102-49	Valve End Cap O-Ring
• 13	AR102-13	Oil Cylinder Back-up Ring	50	AR102-50	Valve End Cap
14	AR102-14	Oil Cylinder	41AY	AR102-41AY	Valve Assembly (40~50)
15	AR102-15	Sealing Washer	• 51	AR102-51	Buffer Ring
16	AR102-16	Oil Screw Plug	• 52	AR102-52	Air Piston Ring
17	AR102-17	Oil Piston	53	AR102-53	Air Piston Rod
• 18	AR102-18	Oil Piston O-Ring	54	AR102-54	Air Piston
• 19	AR102-19	Oil Piston Back-up Ring	55	AR102-55	Air Piston Lock Nut
17AY	AR102-17AY	Oil Piston Assembly (17~19)	54AY	AR102-54AY	Air Piston Assembly (51~55)
• 20	AR102-20	Large Return Spring	• 56	AR102-56	Air Cylinder End Cap O-Ring
• 21	AR102-21	Small Return Spring	57	AR102-57	Air Cylinder End Cap, With Patented Rivet Size Hole Gauge Design™ and Nosepieces Storage Design™
• 22	AR102-22	Hanging Bracket O-Ring	• 58	AR102-58	Air Inlet End Cap O-Ring
23	AR102-23	Hanging Bracket	59	AR102-59	Air Inlet End Cap
24	AR102-24	Oil Cylinder End Cap	• 60	AR102-60	Grip
• 25	AR102-25	Oil Cylinder End Cap O-Ring	• 61	AR102-61	Brush
• 26	AR102-26	Spent Mandrel Container	• 62	AR102-62	Wrench 7222
27	AR102-27	Air Cylinder	• 63	AR102-63	Wrench 2710
• 28	AR102-28	Positioning Screw	• 64	AR102-64	Oil Bottle (without Oil)
• 29	AR102-29	Noise Silencer	65	AR102-65	Hydraulic Oil Injector (without Oil)
30	AR102-30	Noise Silencer Lock Nut			
• 31	AR102-31	Lock Nut O-Ring			

REMARKS: 1) • Means wearing parts or possible missing parts.
2) Part No. 33 Trigger is the Standard Part, Part No. ▲ 33L
3) Trigger Long Type is the Optional Part for choice.
Order Example: AR102-04 Jaws 2-PC Type, 5 sets.
4) ★ Monobolt is a registered trademark of AVDEL.

5) * HSS Nosepieces are for setting High Strength Structural (HSS) Blind Rivets.
6) Part No. 32 Oil Cylinder Lock Nut needs to replace a new one after repeated fastening 3 ~ 4 times.
7) Part No. 31 Lock Nut O-Ring needs to replace a new one when dismantling Part No. 32 Oil Cylinder Lock Nut.